

DANDY

HOW TO OPERATE


Seat Height Adjustment

This paddle has two functions:

- in and out
- up and down

Determine user seat height. When seated in the chair, lift body weight from the seat and at the same time, drop right hand and lift up the paddle under the right side of the seat. This engages the pneumatic height cylinder. When desired seat height is achieved, release paddle. Chair will permanently lock into seat height position. To reduce seat height, follow same procedure EXCEPT remain seated in the chair.

To engage the tilting feature, pull the handle outward (away from the chair) and it will free float or tilt. Bring the chair to complete upright position and push the handle inward towards the chair to lock the chair in the upright fixed position.

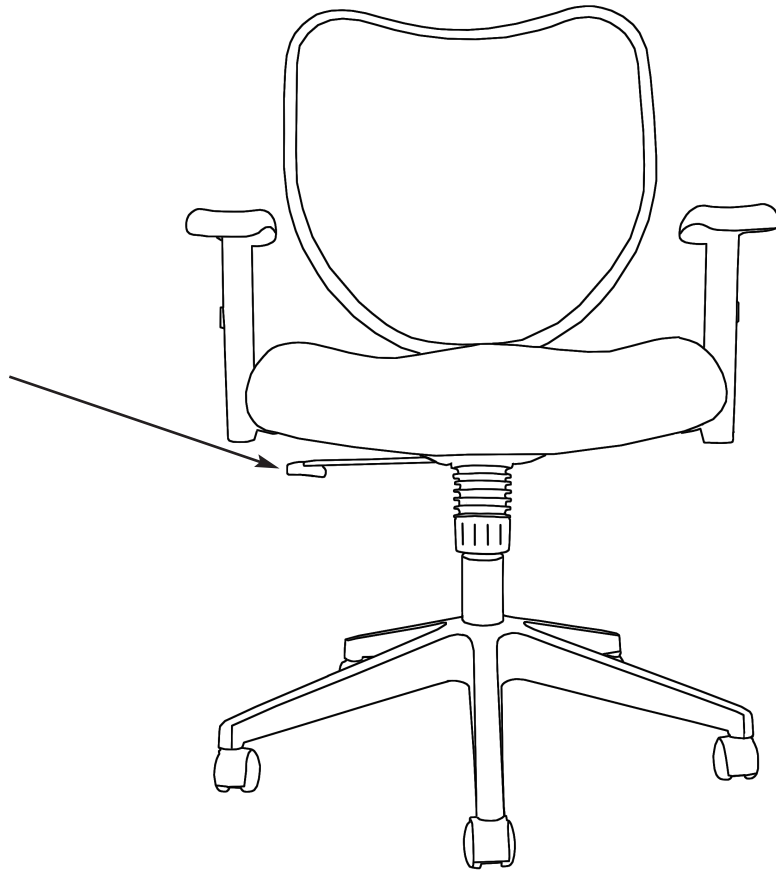

Height Adjustable Arms

Push button in until desired height of arm is reached. Release button when height is adjusted.



Tilt Tension Adjustment

If you decide to allow your chair to tilt freely, then you need to adjust the tension so the chair tilts according to your body weight. While seated in the chair, reach under the seat and turn the knob to the right to tighten and to the left to loosen. *Please note that this feature will only affect the chair if the user wants the chair to tilt freely.*

FEATURES:

- Upholstered seat and black mesh back
- Simple synchro tilt
- Tilt tension adjustment
- Height adjustable arms
- 300 lb. capacity

DIMENSIONS:

- Seat width: 21"
- Seat depth: 20½"
- Back height: 20"
- Back width: 19½"
- Chair weight: 34 lbs.
- Seat height from floor: 17½"-22½"

