



# NIFTY ASSEMBLY INSTRUCTIONS

877-263-5737  
www.buzzseating.com

## IN THE BOX COMPONENTS



Base



Pneumatic Cylinder



Caster (Qty. 5)



Control



Seat Cushion



Back



Arm (Qty. 2)



Arm Screw (Qty. 6)



Rear Seat Plate Screw (Qty. 2)



Plastic Washer (Qty. 2)



Back Screw (Qty. 3)



Front Seat Plate Screw (Qty. 2)




Flat Washer (Qty. 10)



Allen Wrench (Qty. 1)


## STEP 1

Insert 5 casters into base, push hard until you feel or hear the caster snap into place.

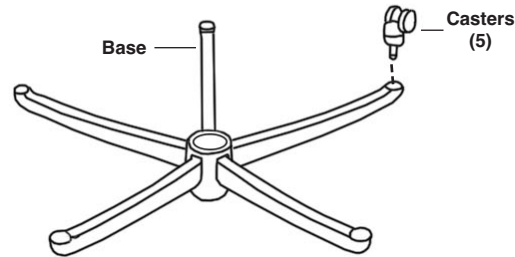


## STEP 2

Attach arms to seat cushion using 3 arm screws and 3 flat washers for each arm. FULLY TIGHTEN SCREWS USING ALLEN WRENCH.

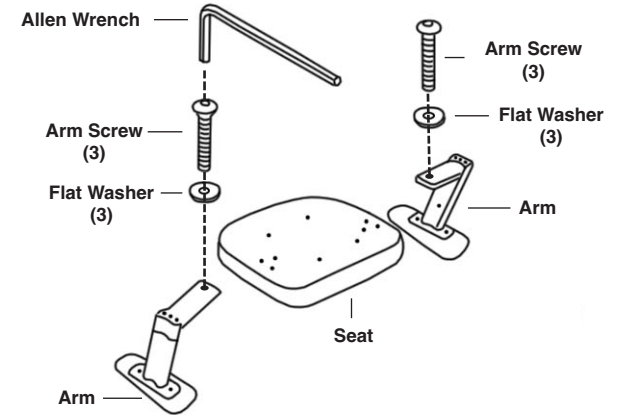


## STEP 3

Attach seat control to seat cushion using 2 front seat plate screws, 2 flat washers and 2 plastic washers for the front and 2 rear seat plate screws and 2 flat washers for the rear. FULLY TIGHTEN SCREWS USING ALLEN WRENCH.

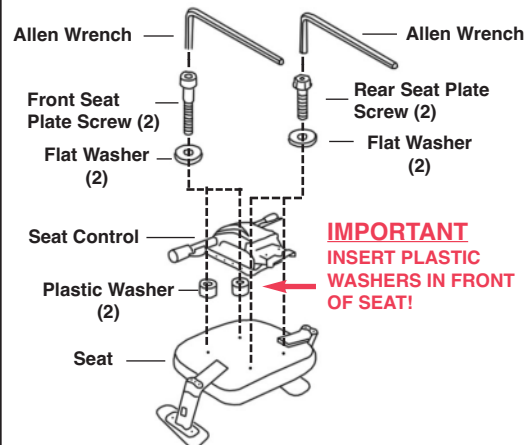

## STEP 4

Attach back assembly to assembled seat by inserting back support into rear of seat plate, secure back support using 3 back screws. FULLY TIGHTEN SCREWS USING ALLEN WRENCH.

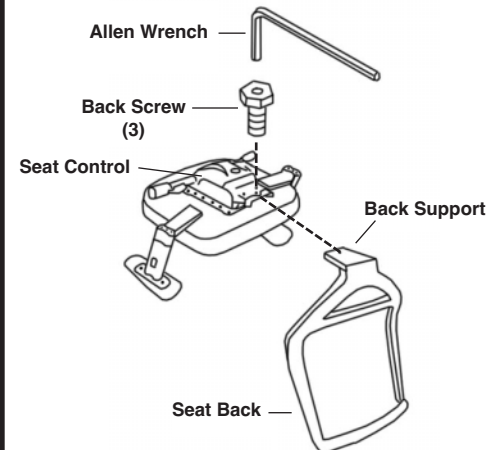

## STEP 5

Insert pneumatic cylinder into base, place assembled seat on top of pneumatic cylinder and apply downward pressure.

