


# POLYURETHANE | How to operate

## MODEL 4001


### Back Height Adjustment - Raise and Lower Back Height

To raise or lower the back, turn the knob located on the outer back counter clockwise until loosened. Once the back moves freely, slide the back up or down to desired height. Once in place, turn the knob clockwise until locked into place.

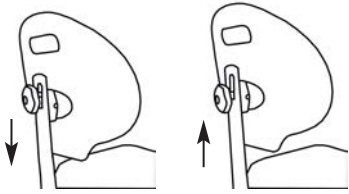


### Seat Depth Adjustment

To adjust the seat depth, locate the knob under the seat that holds the back bar in place. Turn clockwise to loosen. Once the back bar moves freely, slide forward or rearward until the desired seat depth is achieved. Once in place, turn knob counter clockwise to tighten.

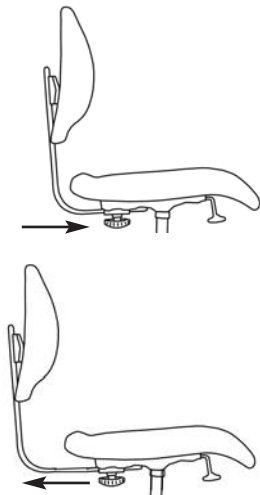


### Seat Height Adjustment - Raise and Lower Seat Height

To raise the seat height, lift your body weight off the chair and lift up on the lever underneath the seat on the right side of the chair. Release the lever when the seat reaches the desired height. To lower the seat, lift the lever up while seated. Release lever when seat reaches desired height.

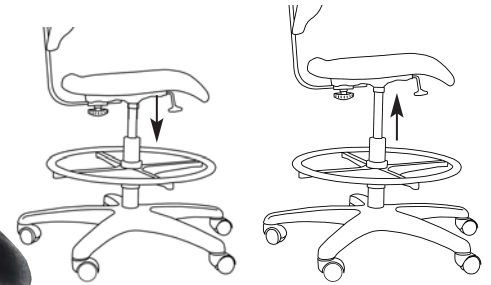


### Footring Adjustment

To adjust the height of the footring, take hold of the black plastic sleeve at the base (bottom) of the footring and hold securely in place. At the same time, and with the other hand turn the aluminum oval ring counterclockwise until loosened. Adjust up or down to desired height. Once achieved, repeat the process except turn clockwise to tighten into place.

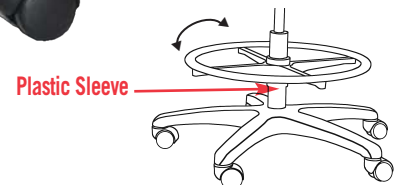

QUESTIONS? 877.263.5737 • [www.buzzseating.com](http://www.buzzseating.com)

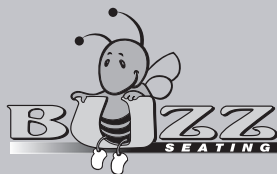

### FEATURES:

- Back Height Adjustment
- Seat Depth Adjustment
- Seat Height Adjustment
- Footring Adjustment