 


POLYURETHANE | How to operate

MODEL 4003


Back Height Adjustment - Raise and Lower Back Height

To raise or lower the back, turn the knob located on the outer back counter clockwise until loosened. Once the back moves freely, slide the back up or down to desired height. Once in place, turn the knob clockwise until locked into place.

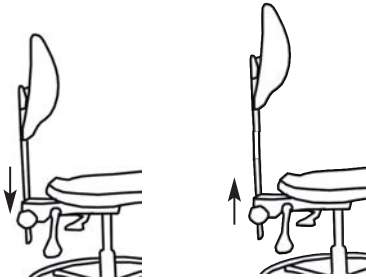


Back Tilt Adjustment - Adjust the Pitch of the Back

To adjust the (tilt) angle of the back, while in the seated position locate the rear lever under the seat that locks the back bar (tilt) angle in place. Lift up on the lever to allow the back to move freely forward or rearward. Once the back bar moves freely, lean forward or rearward until the desired angle is achieved. Then push down on the lever to lock the back (tilt) angle into place.

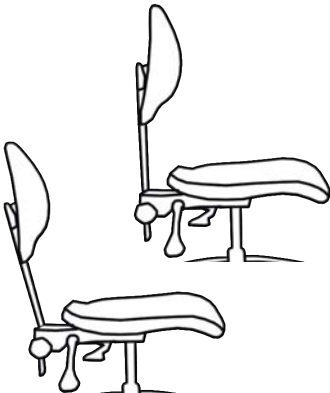


Seat Height Adjustment - Raise and Lower Seat Height

To raise the seat height, lift your body weight off the chair and lift up on the front lever underneath the seat on the right side of the chair. Release the lever when the seat reaches the desired height. To lower the seat, lift the lever up while seated. Release lever when seat reaches desired height.

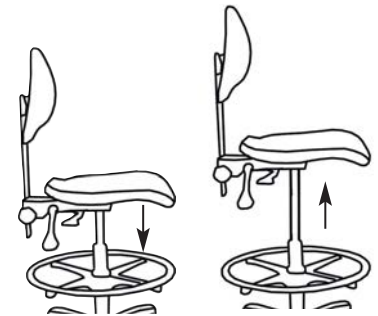


Footring Adjustment

 To adjust the height of the footring, take hold of the black plastic sleeve at the base (bottom) of the footring and hold securely in place. At the same time, and with the other hand turn the aluminum oval ring counterclockwise until loosened. Adjust up or down to desired height. Once achieved, repeat the process except turn clockwise to tighten into place.

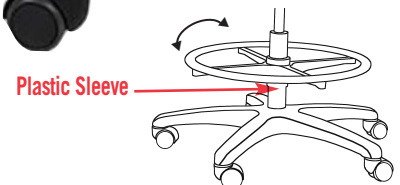

QUESTIONS? 877.263.5737 • www.buzzseating.com

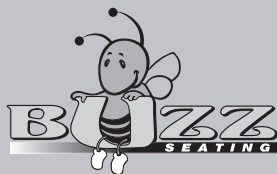

FEATURES:

- Back Height Adjustment
- Seat Height Adjustment
- Seat Depth Adjustment
- Footring Adjustment